 


# crossline

sedus

Instructions for use

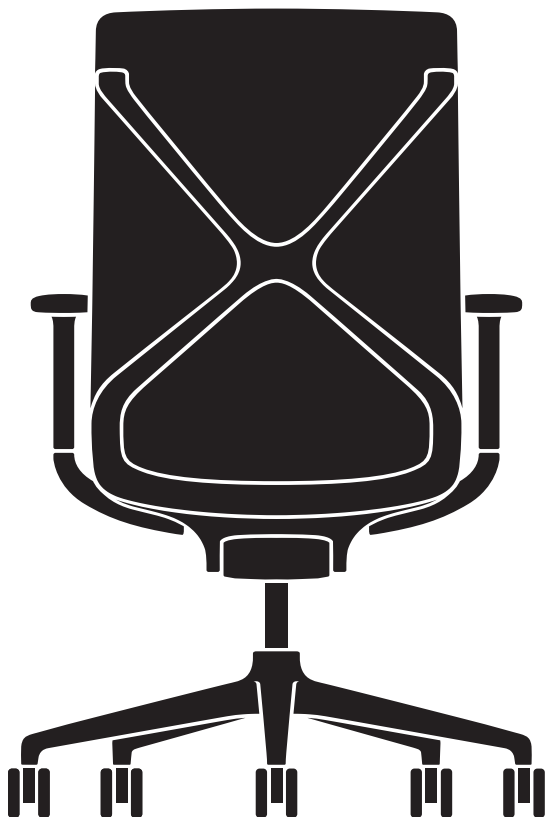

 
# Healthy sitting is a question of attitude



## ► Sit well back in the chair


The anatomically shaped seat should be fully occupied. Only then is proper contact with the supporting backrest assured.

“crossline” is also available with an adjustable seat tilt and a sliding seat. These allow the seat to be adjusted individually to suit most body sizes.

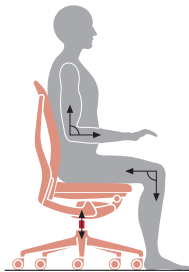

## ► Adjust the height of the seat precisely

 The correct seat height means that the elbow joint adopts an angle of about 90° when the forearms are resting horizontally on the desktop. The knee joint will also adopt an angle of about 90° when the feet are flat on the floor. If your desktop is too high, and cannot be lowered to a correct position, you need a footrest with adjustable height and tilt.

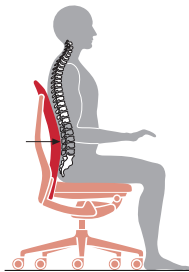

## ► Adjust the backrest

Adjust the height of the lumbar support so that the curvature of the backrest supports the spine in the region of the third and fourth lumbar vertebrae (where the forward curvature is greatest). This stabilises the natural S-shape of the spine in every sitting position.

## ► Dynamic sitting

Dynamic sitting means changing your sitting posture frequently, or in other words shifting as often as possible between the front and rear sitting posture. You should therefore adjust the backrest dynamically. “crossline” is equipped with a “Similar-Plus” mechanism, allowing you to adjust the backrest pressure as best suits you. This ensures that the backrest and seat automatically give your body support in every sitting/reclining position.



# The functions of the swivel chair



## A Height of the seat

- ▶ Lowering the seat:
  1. Sit down on the seat
  2. Pull the lever upwards (the seat will drop slowly)
  3. Releasing the lever at the desired height will lock the position
- ▶ Raising the seat:
  1. Stand up
  2. Pull the lever upwards (the seat will rise slowly)
  3. Releasing the lever at the desired height will lock the position



## C Height of the lumbar support

- ▶ Adjusting the height:
  1. Take your weight off the backrest
  2. Push the handles on both sides to the desired height



 
## D Strength of the backrest pressure

- ▶ Increasing the backrest pressure:
  1. Take your weight off the backrest
  2. Pull out the knob
  3. Turn the quick adjustment mechanism clockwise
  4. Push the knob back in
- ▶ Reducing the backrest pressure:
  1. Take your weight off the backrest
  2. Pull out the knob
  3. Turn the quick adjustment mechanism anticlockwise
  4. Push the knob back in



## B Presetable opening angle

- ▶ Setting the angle:
  1. Take your weight off the backrest
  2. Pull out the knob
  3. Turn the knob to set the opening angle (0, 11, 22, 32 degrees)
  4. Push the knob back in

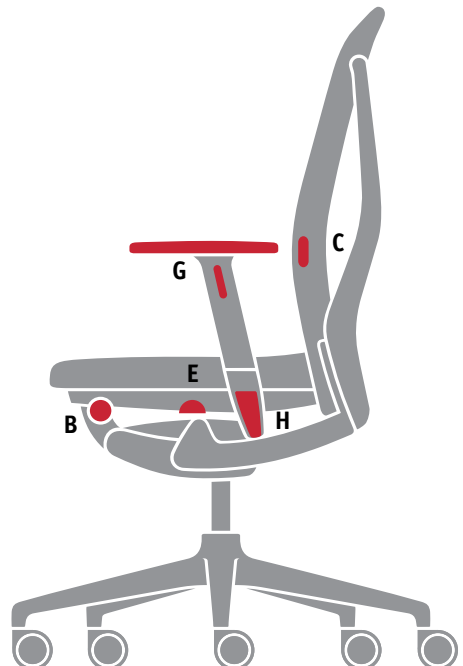



**E**  
**Adjusting the seat tilt (optional)**

- ▶ To tilt the seat forwards:
  1. Stand up
  2. Pull the lever upwards, the seat will rise automatically, releasing the lever at the required seating angle will lock the position
- ▶ To return the seat to horizontal:
  1. Stand up
  2. Pull the lever upwards, sit down on the seat and return to the normal, horizontal position



**F**  
**Depth of the seat (optional)**

- ▶ Increasing the depth of the seat:
  1. Pull the lever upwards
  2. Sit on the seat and in doing so push the cushion into the desired position
  3. Release the lever, the seat locks
- ▶ Decreasing the depth of the seat:
  1. Stand up
  2. Pull the lever upwards
  3. The cushion returns to the normal position automatically
  4. Release the lever, the seat locks



**G**  
**Adjusting the multifunction armrests (optional)**

 
- ▶ To adjust the height of the armrests:
  1. Press and hold the button
  2. Raise or lower the armrest to the desired height
  3. Release the button to lock the armrest
- ▶ To adjust the depth of the armrests:

Slide the armrest cover backwards or forwards; it will lock in place automatically



**H**  
**Sitting width between the armrests (optional)**

- ▶ To adjust the sitting width between the armrests:
  1. Press the lever down
  2. Slide the armrest into the desired position
  3. Pull the lever upwards and fold away

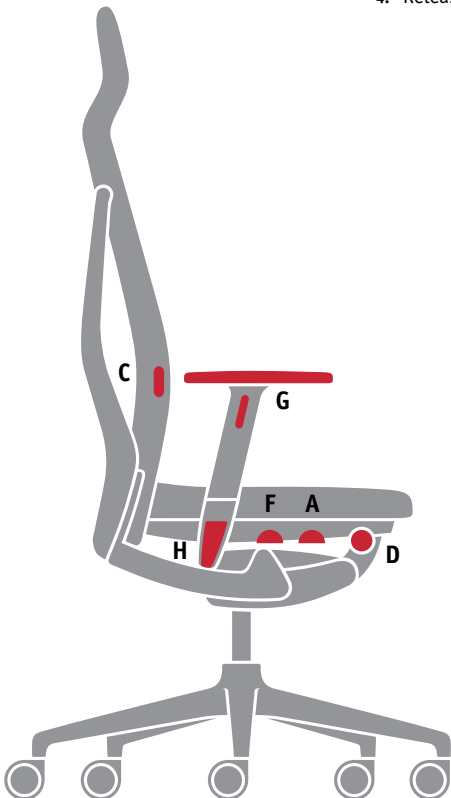

# Tips for users

## **Correct use**

This office swivel chair is designed for a user weight of up to 120 kg and may only be used for the purpose intended while exercising due care and attention. Using it inappropriately (e.g. as a step-ladder, sitting on the armrests or placing extreme weight on one side) could result in accidents.

## **Castors**

Please remove the red or blue transport protection before using the product for the first time.

A variety of castors are available, for the sake of your safety and for use on different types of flooring in accordance with safety regulations:

– Hard castors for soft flooring (standard)

– Soft castors for hard floors are optional

Changing castors: this might be necessary, for instance, after moving office, or after the installation of a new floor covering – simply pull out the castors and push new ones in.

## **Armrests**

Armrests can be fitted later or exchanged on all models.

## **Plastic parts**

Soapy water is suitable for cleaning. Please do not use any aggressive cleaning materials.

## **Upholstery**

In the case of light damage or soiling to the upholstery, please only use suitable delicate cleansing agents, or Sedus cleaning foam. The upholstery should only be changed by skilled persons.

## **Leather**

Leather is a natural product.

The natural markings of the animal skin gives the material its unmistakable texture.

Rub off light soiling with a soft woollen cloth. Heavier soiling should only be treated with cleaners designed for aniline-dyed leather.

Do not expose semi-aniline leather to direct sunshine.

## **Servicing**

Servicing work, such as exchanging or working on the pneumatic springs, may only be carried out by trained personnel.

**Deutschland**

Sedus Stoll Aktiengesellschaft, Brückenstraße 15, D-79761 Waldshut  
Telefon (077 51) 84-0, Telefax (077 51) 84-310  
E-Mail [sedus@sedus.de](mailto:sedus@sedus.de), Internet [www.sedus.de](http://www.sedus.de)

**Belgique**

Sedus Stoll b.v.b.a./s.p.r.l., Korte Massemenssesteenweg 58/2, B-9230 Wetteren  
Telefoon (09) 369 96 14, Telefax (09) 368 19 82  
E-Mail [sedus.be@sedus.com](mailto:sedus.be@sedus.com), Internet [www.sedus.be](http://www.sedus.be)

**España**

Sedus Stoll, S. A., Parque Empresarial San Fernando, Avenida Castilla, 2  
Edificio Italia – 1ª planta, E-28830 San Fernando de Henares  
Teléfono 91/597 01 76, Telefax 91/676 32 45  
E-Mail [sedus.es@sedus.com](mailto:sedus.es@sedus.com), Internet [www.sedus.es](http://www.sedus.es)

**France**

Sedus, 2, rue de la Baume, F-75008 Paris  
Téléphone 01 53 77 20 50, Fax 01 53 77 20 51  
E-Mail [commercial@sedus.fr](mailto:commercial@sedus.fr), Internet [www.sedus.fr](http://www.sedus.fr)

**Great Britain**

Sedus Stoll Ltd., 157A St John Street, Clerkenwell, London EC1V 4DU  
Telephone 020 7566 3990, Telefax 020 7566 3999  
E-Mail [sedus.uk@sedus.co.uk](mailto:sedus.uk@sedus.co.uk), Internet [www.sedus.co.uk](http://www.sedus.co.uk)

**Italia**

Sedus Stoll S.r.l., Via Volta snc, I-22071 Cadorago (CO)  
Telefono 031.494.111, Telefax 031.494.140  
E-Mail [sedus.it@sedus.com](mailto:sedus.it@sedus.com), Internet [www.sedus.it](http://www.sedus.it)

**Nederland**

Sedus Stoll B.V., Platinastraat 33, NL-2718 SZ Zoetermeer  
Telefoon 079 3631590, Telefax 079 3631599  
E-Mail [sedus.nl@sedus.com](mailto:sedus.nl@sedus.com), Internet [www.sedus.nl](http://www.sedus.nl)

**Österreich**

Sedus Stoll Ges.m.b.H., Kirchenstraße 37/1/13, A-5301 Eugendorf  
Telefon (06225) 21 0 54-0, Telefax (06225) 21 0 56  
E-Mail [sedus.at@sedus.at](mailto:sedus.at@sedus.at), Internet [www.sedus.at](http://www.sedus.at)

**Schweiz**

Sedus Stoll AG, Industriestrasse West 24, CH-4613 Rickenbach  
Telefon 062/216 41 14, Telefax 062/216 38 28  
E-Mail [sedus.ch@sedus.ch](mailto:sedus.ch@sedus.ch), Internet [www.sedus.ch](http://www.sedus.ch)

**75.0436.900**

# crossline

sedus

Instructions for use



## Function



### Height of the seat

- ▶ Lowering the seat:
  1. Sit down on the seat
  2. Pull the lever upwards (the seat will drop slowly)
  3. Releasing the lever at the desired height will lock the position
  
- ▶ Raising the seat:
  1. Stand up
  2. Pull the lever upwards (the seat will rise slowly)
  3. Releasing the lever at the desired height will lock the position



## Tips for users

### Correct use

This conference swivel chair is designed for a user weight of up to 120 kg and may only be used for the purpose intended while exercising due care and attention. Using it inappropriately (e.g. as a step-ladder, sitting on the armrests or placing extreme weight on one side) could result in accidents.

### Glides/Castors

Please remove the red or blue transport protection before using the product for the first time. A variety of glides/castors are available, for the sake of your safety and for use on different types of flooring in accordance with safety regulations:

- Hard glides/castors for soft flooring (standard)
- Soft glides/castors for hard flooring are optional.

Changing glides/castors: this might be necessary, for instance, after moving office, or after the installation of a new floor covering – simply pull out the glides/castors and push new ones in.

### Plastic parts

Soapy water is suitable for cleaning. Please do not use any aggressive cleaning materials.

### Upholstery

In the case of light damage or soiling to the upholstery, please only use suitable delicate cleansing agents, or Sedus cleaning foam. The upholstery should only be changed by skilled persons.

### Leather

Leather is a natural product. The natural markings of the animal skin gives the material its unmistakable texture. Rub off light soiling with a soft woollen cloth. Heavier soiling should only be treated with cleaners designed for aniline-dyed leather. Do not expose semi-aniline leather to direct sunshine.

### Servicing

Servicing work, such as exchanging or working on the pneumatic springs, may only be carried out by trained personnel.

## Función



### Altura del asiento

► Bajar el asiento:

1. Siéntese
2. Tire de la palanca hacia arriba (el asiento baja lentamente)
3. Suelte la palanca a la altura deseada = queda fijado

► Elevar el asiento:

1. Sin estar sentado
2. Tire de la palanca hacia arriba (el asiento sube lentamente)
3. Suelte la palanca a la altura deseada = queda fijado



## Indicaciones para el usuario

### Aplicación

Este sillón de conferencia giratorio es adecuado para personas con un peso corporal de hasta 120 kg y debe utilizarse de acuerdo con las instrucciones y siguiendo las normas generales de cuidado. En caso de utilizarse indebida (p. ej., subiéndose a ella, sentándose en los apoyabrazos o carga unilateral extrema) existe peligro de accidente.

### Ruedas/elementos deslizantes

Antes del primer uso retire la protección roja o azul para transporte. Por su seguridad y para los diversos revestimientos de suelos, disponemos de diferentes tipos de ruedas/elementos deslizantes conforme a las normativas de seguridad:

- Ruedas/elementos deslizantes con superficie dura para suelos textiles (de serie).
- Ruedas/elementos deslizantes con superficie blanda para todos los suelos no textiles.

Cambio de las ruedas/elementos deslizantes; p. ej., después de una mudanza o de haberse cambiado el revestimiento del suelo: basta con extraer o introducir las ruedas/elementos deslizantes.

### Piezas plásticas

Para la limpieza es apropiada una solución jabonosa. Le rogamos no utilizar productos agresivos de limpieza.

### Tapizado

Si existe una ligera suciedad, utilizar únicamente jabones neutros o la espuma de limpieza ofrecida por Sedus. Las piezas del tapizado sólo deben ser reemplazadas por personal especializado.

### Cuero

El cuero es un producto natural. Las deformaciones naturales en la piel del animal le dan al material su nota inconfundible. Frote la suciedad ligera con un paño blando de lana. En caso de suciedad más intensa utilice únicamente productos detergentes especiales para cuero coloreado con anilina. No exponga el cuero de semianilina a la radiación solar directa.

### Servicio

Los trabajos de servicio, tales como, p. ej., recambios y trabajos en la zona de suspensión por cartucho de gas, sólo deben ser llevados a cabo por personal especializado e instruido al respecto.