


high end

sedus

Assembly Instructions

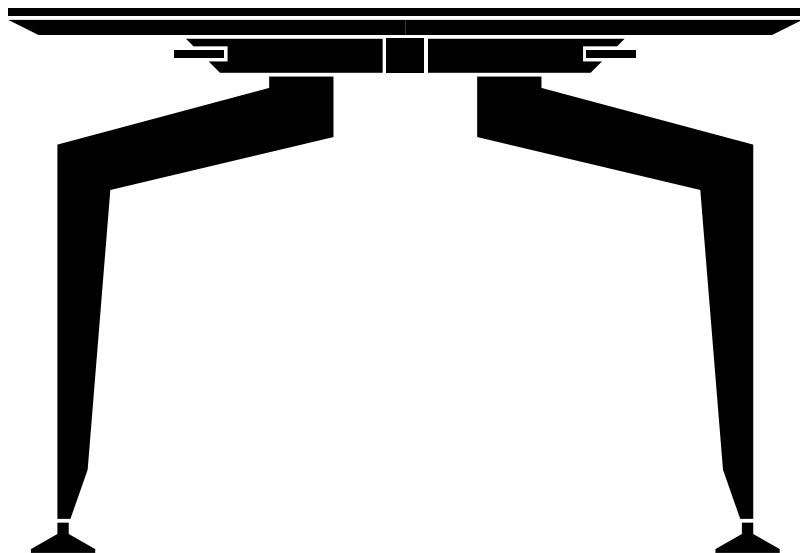

Please read through these assembly instructions carefully before you start assembling “high end”. You do not require any tools throughout the entire assembly. All the steps necessary can be done by hand. The assembly should be carried out by two people.

Stand-alone table set includes

- Table top
- Two leg pairs
- Transverse beam

Modular system includes

- Interconnecting tops/
Angular tops
- End pieces
- Connection pins
- Leg pairs
- Transverse beams

Assembling stand-alone tables

- Attaching the leg pairs to the transverse beam:
1. Place one leg pair vertically on the ground – **Fig. A**
 2. Attach the transverse beam to the leg pair and lock into place – **Fig. B**
 3. Align the second leg pair and attach/lock into place the transverse beam (as above) (ensure that the leg pairs and transverse beam are at a 90° angle to one another)
- Assembling the table top:
1. Place the table top onto the table frame
 2. Align the table top in such a way that the keyholes are positioned flush over the locking parts of the leg pairs – **Fig. C**
 3. Press the handwheels located on the locking parts upwards from below **(1)** and turn clockwise by 90° **(2)**, the table top is locked into position – **Fig. D**
 4. The table is dismantled in the reverse order

Assembling the modular units

Assembly is carried out in the same way as for the stand-alone tables. In addition please use the enclosed connection pins between the table tops.

Please note that a gap can occur when more than four tops are linked in a row. In this case simply push the tops together after placing them horizontally and only then lock into position.

Dealing with uneven surfaces

All leg pairs are fitted with height-adjustable tilt glides. Uneven floor surfaces can thus easily be dealt with.

Fig. A
Placing the leg pairs vertically

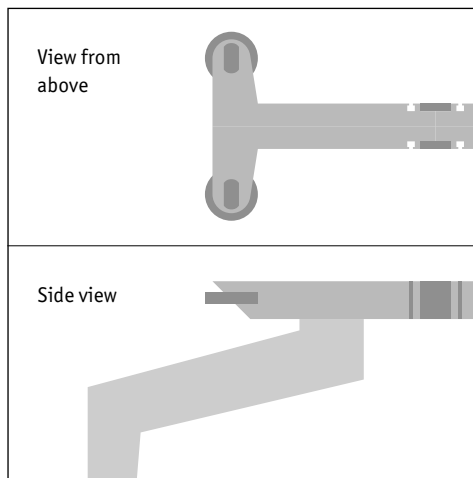


Fig. B
Attaching the transverse beam

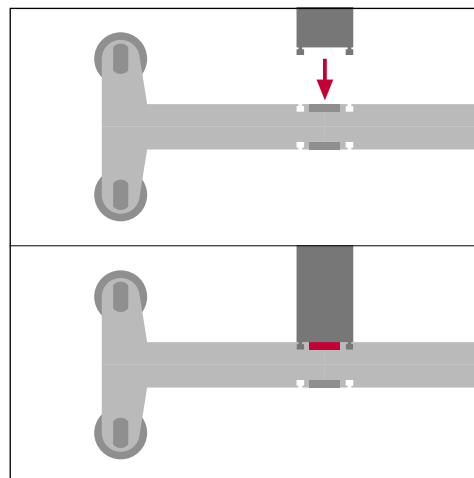


Fig. C
Placing and aligning the table top


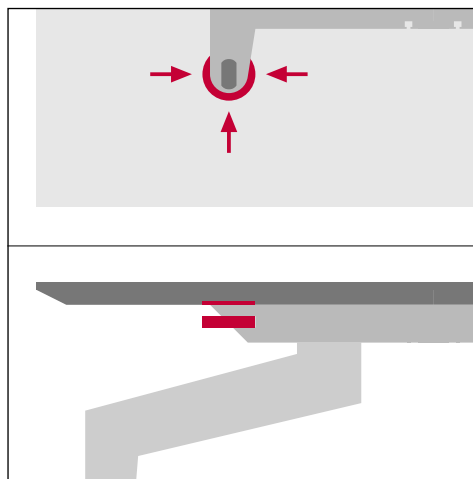


Fig. D
Locking the table top into position

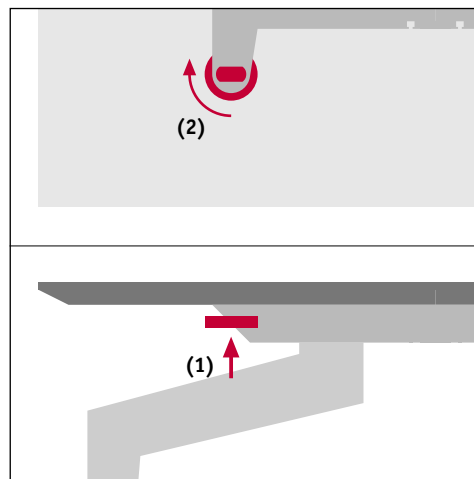

Deutschland

Sedus Stoll Aktiengesellschaft
Brückenstraße 15
D-79761 Waldshut
Telefon (077 51) 84-0
Telefax (077 51) 84-310
E-Mail sedus@sedus.de
Internet www.sedus.de

Österreich

Sedus Stoll Ges.m.b.H.
Köstendorferstraße 16
A-5202 Neumarkt a. W.
Telefon (06216) 4494-0
Telefax (06216) 7184
E-Mail sedus.at@sedus.at
Internet www.sedus.at

Schweiz

Sedus Stoll AG
Fulenbacherstrasse 171
CH-4618 Boningen
Telefon 062/2164114
Telefax 062/2163828
E-Mail sedus.ch@sedus.ch
Internet www.sedus.ch

Nederland

Sedus Stoll B.V.
Christiaan Huygensstraat 8
NL-2665 KX Bleiswijk
Telefoon 010-5214188
Telefax 010-5213189
E-Mail sedus@ned.net
Internet www.sedus.com

Italia

Sedus Stoll S.r.l.
Via Giotto, 20/22
I-22075 Lurate Caccivio (CO)
Telefono 031.494.111
Telefax 031.494.140
E-Mail sedus@sedus.it
Internet www.sedus.it

Great Britain

Sedus Stoll Ltd.
London Road, Gloucestershire
Fairford GL7 4DS, Great Britain
Telephone 01285-713913
Telefax 01285-713920
E-Mail sedus.uk@sedus.co.uk
Internet www.sedus.co.uk

France

Sedus
Zone Industrielle, BP 36
F-68190 Ensheim
Téléphone 03.89.83.48.00 (+)
Téléfax 03.89.83.48.19
E-Mail commercial@sedus.fr
Internet www.sedus.fr

Belgique

Sedus Stoll b.v.b.a./s.p.r.l.
Korte Massemensesteenweg 58/7
B-9230 Wetteren
Telefoon (09) 3699614
Telefax (09) 3681982
E-Mail sedus@skynet.be
Internet www.sedus.com

España

Sedus Stoll, S. A.
C./Pintor Juan Gris Nº 5, 1º C
E-28020 Madrid
Teléfono 91/5970176
Telefax 91/5972265
E-Mail sedus.es@sedus.es
Internet www.sedus.com

75.491.900