


talk about

sedus

## Assembly Instructions



## Contents

1. Tables with removable individual legs
2. Tables with folding individual legs
3. Tables with folding T-leg
4. Linking individual tables (fast link system)
5. Inserting interconnecting tops
6. Stacking tables and interconnecting tops
7. Assembling circular tables
8. Accessories
9. Instructions for care

**Read these instructions carefully prior to assembly, and follow the points listed exactly.**

### Preparation



All assembly stages can be completed by hand without the need for tools.

Exception: An Allen key (size 8) is required when assembling the circular tables.

## 1. Tables with removable individual legs


### Assembly

1. Place the table upside down on the floor, ensuring that the table top is not scratched on the floor in the process
2. Position one table leg vertically with the screw on the corner threaded hole
3. Screw in the leg in a clockwise direction as far as possible, make sure it is fitted tightly
4. Repeat these steps to assemble the remaining legs
5. Turn the table upright and check that it is stable
6. The height-adjustable glides can be used to compensate for uneven flooring

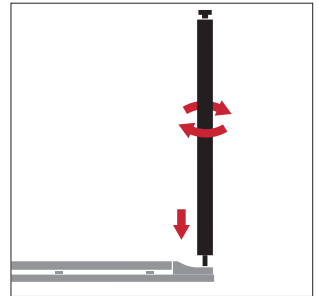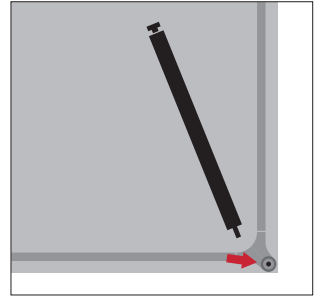

### Dismantling





1. Place the table upside down on the floor, ensuring that the table top is not scratched on the floor in the process
2. Unscrew the table legs in an anticlockwise direction

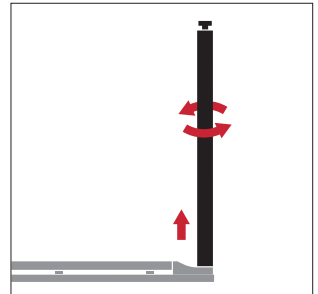

## 2. Tables with folding individual legs

### Assembly





1. Place the table upside down on the floor, ensuring that the table top is not scratched on the floor in the process **(A)**
2. Release one table leg from the lock by pushing towards the joint **(B)**
3. Fold up the table leg **(C)**
4. Push the table leg into the corner element and keep it pressed down whilst screwing tight in a clockwise direction **(D)**
5. Repeat these steps to assemble the remaining legs
6. Turn the table upright and check that it is stable
7. The height-adjustable glides can be used to compensate for uneven flooring

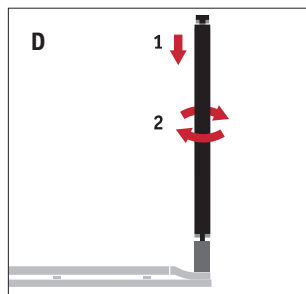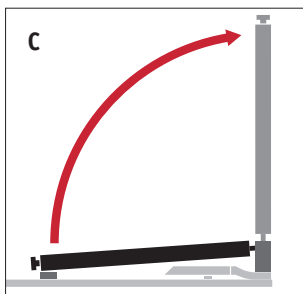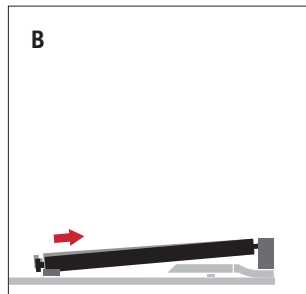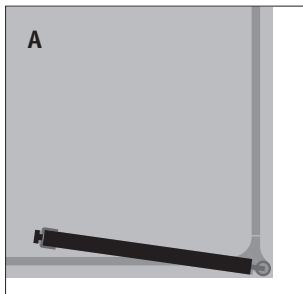

### Dismantling

1. Place the table upside down on the floor, ensuring that the table top is not scratched on the floor in the process
2. Unscrew the table leg in an anticlockwise direction until the spring force of the joint is released **(A/B)**
3. Fold down the table leg\* **(C)**
4. Push the leg towards the joint and lock it into place **(D)**
5. Repeat these steps to fold up the remaining table legs


\* The glides of tables with an edge length of 700 mm should be completely screwed in otherwise the leg cannot be locked into place.

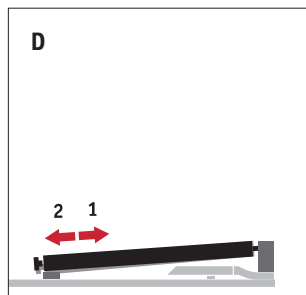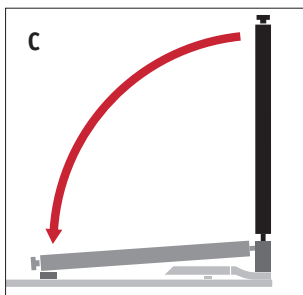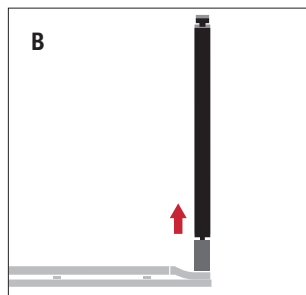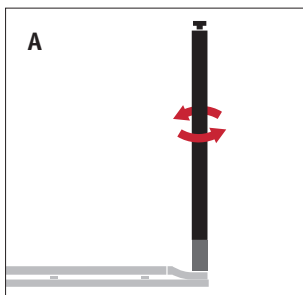

### 3. Tables with folding T-leg



#### Assembly

1. Place the table upside down on the floor, ensuring that the table top is not scratched on the floor in the process
2. Grip the bottom end of the T-leg and fold it up until it noticeably locks into place
3. Repeat this procedure for the other T-leg
4. Turn the table upright and check that it is stable

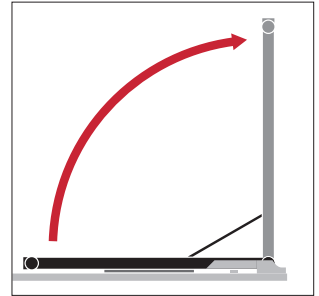

#### Dismantling



1. Place the table upside down on the floor, ensuring that the table top is not scratched on the floor in the process
2. Press the locking mechanism towards the table top (A) to release the lock, fold up the T-leg (B)

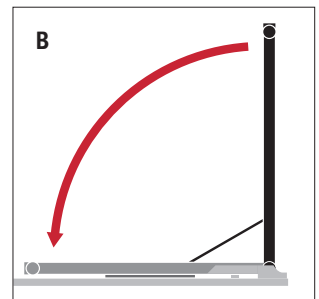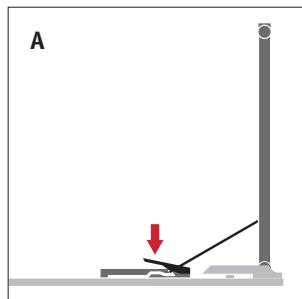

**Important!** Tables should be transported with the table tops facing downwards otherwise the column frame may release itself and fold out.

### 4. Linking individual tables (fast link system)

1. Set up the tables end-to-end or with the long sides against each other
2. Attach the plastic clip to the rail on the first table (A)
3. To attach the tables press the clip over the rail on the second table with your hand (B)
4. The fast link system locks into place



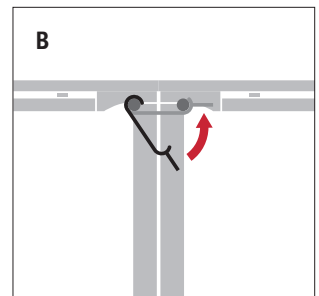
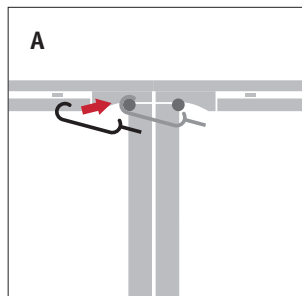


We recommend 2 clips for each table side.

## 5. Inserting interconnecting tops

### Assembly

1. Push the thin end of the linking element between the rail and the table top (directly into the gap next to the table leg) **(A)**
2. Position the side recess in the thicker end of the linking element against one side of the rail suspension, then engage the other side making sure it noticeably locks into place **(B)**
3. Pull out the metal rail as far as possible using the grip recess; the linking element is now fully installed **(C)**
4. Set up the individual tables and fit the interconnecting top on top of the four linking elements
5. Push in the locking rail bolt (on the interconnecting top) as far as possible; the table tops are now firmly connected **(D)**

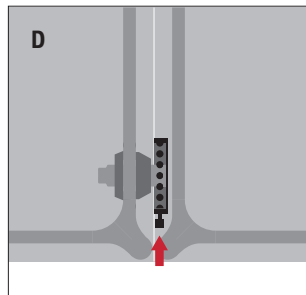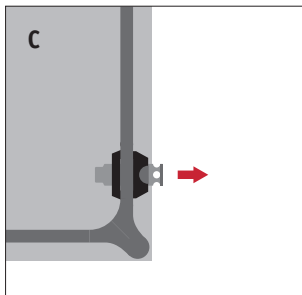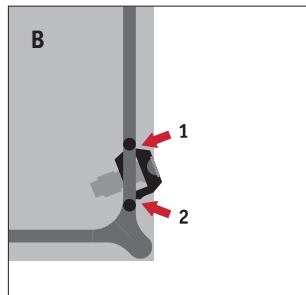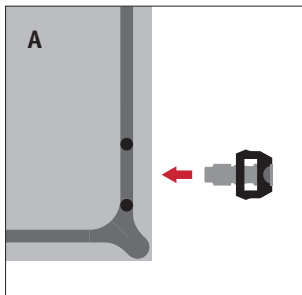

### Dismantling



1. Pull out the locking rail bolt (on the interconnecting top) as far as possible
2. Lift the interconnecting top off the four linking elements
3. Push in the metal rails on the linking elements

## 6. Stacking tables and interconnecting tops

All talk about tables (except circular tables) and interconnecting tops can be stacked when dismantled or folded up.



The table tops are stacked horizontally with the top facing downwards, ensure that the table top at the bottom is not scratched on the floor.

The table tops are placed (protected against slippage and scratches) on rubber pads.

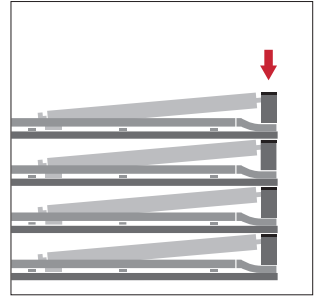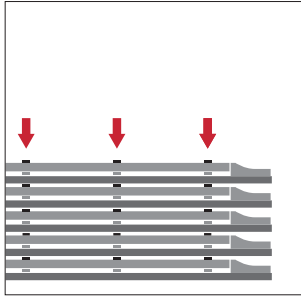

## 7. Assembling circular tables

1. Place the table upside down on the floor, ensuring that the table top is not scratched on the floor in the process
2. Screw the four upright tubes into the mounting plate (already preassembled on the table top) in a clockwise direction, making sure they are fitted tightly **(A)**
3. Place the base plate with the curved side facing downwards onto the four upright tubes, align the screw holes precisely above each other
4. Insert the screws and screw in using an Allen key (size 8) in a clockwise direction, making sure they are fitted tightly **(B)**
5. Turn the table upright and check that it is stable

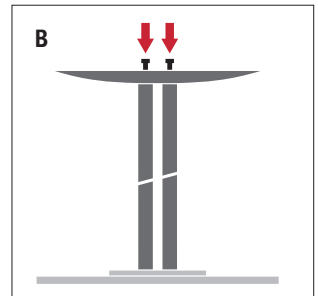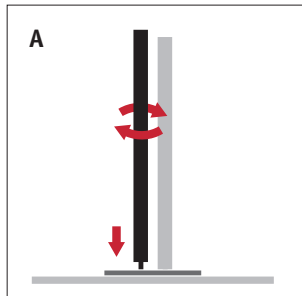


## 8. Accessories

### Cable channel

The cable channel is used to feed cables horizontally under the table top (suitable for all tables and inter-connecting tops except circular tables).

The channel is fixed using the clips to either the inner or outer side of the table rail.

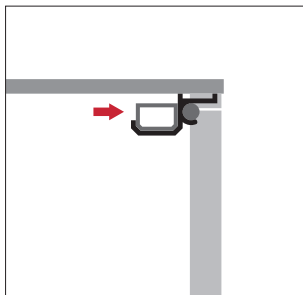

### Cable clips

Cable clips are used to run cables down the table legs from the cable channel to the floor (suitable for all tables with four legs).

Two clips are fixed to each table leg.

### Cable tubing


The cable tubing is used to run cables down the table legs and is fixed with the screws enclosed to any point on the underside of the table.

### Modesty panels

Modesty panels for individual tables and interconnecting tops (rectangular, square or trapezoidal-shaped tops) are attached to the table rail using the plastic clips.

### Media box

Four-leg tables may be equipped with a media box by the manufacturer.

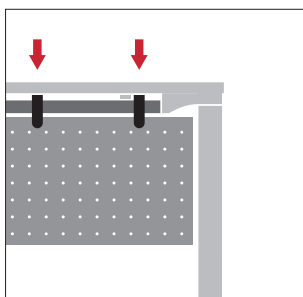

## 9. Instructions for care

### Veneer

An all-purpose cloth with warm water, possibly with a little liquid soap or washing-up liquid is suitable for cleaning the tables.

We do not recommend the use of furniture polishes.

### Laminate

Light to moderately soiled surfaces can be cleaned with an all-purpose cloth and warm water.

For more heavily soiled surfaces, a light soapy solution or glass cleaner may be used.

The laminate surface should be rubbed dry after cleaning.

The use of cleaning products containing abrasive agents (scouring cream) and furniture polishes is not recommended.

## **Deutschland**

Sedus Stoll Aktiengesellschaft  
Brückenstraße 15  
D-79761 Waldshut  
Telefon (077 51) 84-0  
Telefax (077 51) 84-310  
E-Mail [sedus@sedus.de](mailto:sedus@sedus.de)  
Internet [www.sedus.de](http://www.sedus.de)

## **Österreich**

Sedus Stoll Ges.m.b.H.  
Köstendorferstraße 16  
A-5202 Neumarkt a. W.  
Telefon (06216) 4494-0  
Telefax (06216) 7184  
E-Mail [sedus.at@sedus.at](mailto:sedus.at@sedus.at)  
Internet [www.sedus.at](http://www.sedus.at)

## **Schweiz**

Sedus Stoll AG  
Industriestrasse West 24  
CH-4613 Rickenbach  
Telefon 062/2164114  
Telefax 062/2163828  
E-Mail [sedus.ch@sedus.ch](mailto:sedus.ch@sedus.ch)  
Internet [www.sedus.ch](http://www.sedus.ch)

## **Nederland**

Sedus Stoll B.V.  
Rhijnspoor 239  
NL-2901 LB Capelle aan den IJssel  
Telefoon 010-5214188  
Telefax 010-5213189  
E-Mail [sedus.nl@sedus.com](mailto:sedus.nl@sedus.com)  
Internet [www.sedus.com](http://www.sedus.com)

## **Italia**

Sedus Stoll S.r.l.  
Via Giotto, 20/22  
I-22075 Lurate Caccivio (CO)  
Telefono 031.494.111  
Telefax 031.494.140  
E-Mail [sedus.it@sedus.com](mailto:sedus.it@sedus.com)  
Internet [www.sedus.it](http://www.sedus.it)

## **Great Britain**

Sedus Stoll Ltd.  
157A St John Street, Clerkenwell  
London EC1V 4DU, Great Britain  
Telephone 020 7566 3990  
Telefax 020 7566 3999  
E-Mail [sedus.uk@sedus.co.uk](mailto:sedus.uk@sedus.co.uk)  
Internet [www.sedus.co.uk](http://www.sedus.co.uk)

## **Belgique**

Sedus Stoll b.v.b.a./s.p.r.l.  
Korte Massemensesteenweg 58/7  
B-9230 Wetteren  
Telefoon (09) 3699614  
Telefax (09) 3681982  
E-Mail [sedus.be@sedus.com](mailto:sedus.be@sedus.com)  
Internet [www.sedus.be](http://www.sedus.be)

## **España**

Sedus Stoll, S. A.  
C./Pintor Juan Gris N° 5, 1° C  
E-28020 Madrid  
Teléfono 91/5970176  
Telefax 91/5972265  
E-Mail [sedus.es@sedus.com](mailto:sedus.es@sedus.com)  
Internet [www.sedus.com](http://www.sedus.com)

## **France**

Sedus  
Parc aux Vignes  
6, Allée des Vendanges  
Croissy Beaubourg, BP 18  
F-77313 Marne-la-Vallée cedex 2  
Téléphone 01.60.37.76.76  
Téléfax 01.60.17.37.08  
E-Mail [commercial@sedus.fr](mailto:commercial@sedus.fr)  
Internet [www.sedus.fr](http://www.sedus.fr)

**75.493.900**